



IMPULSE AUTOSEALER AIE-300A1, 450A1, 600A1 INSTRUCTION

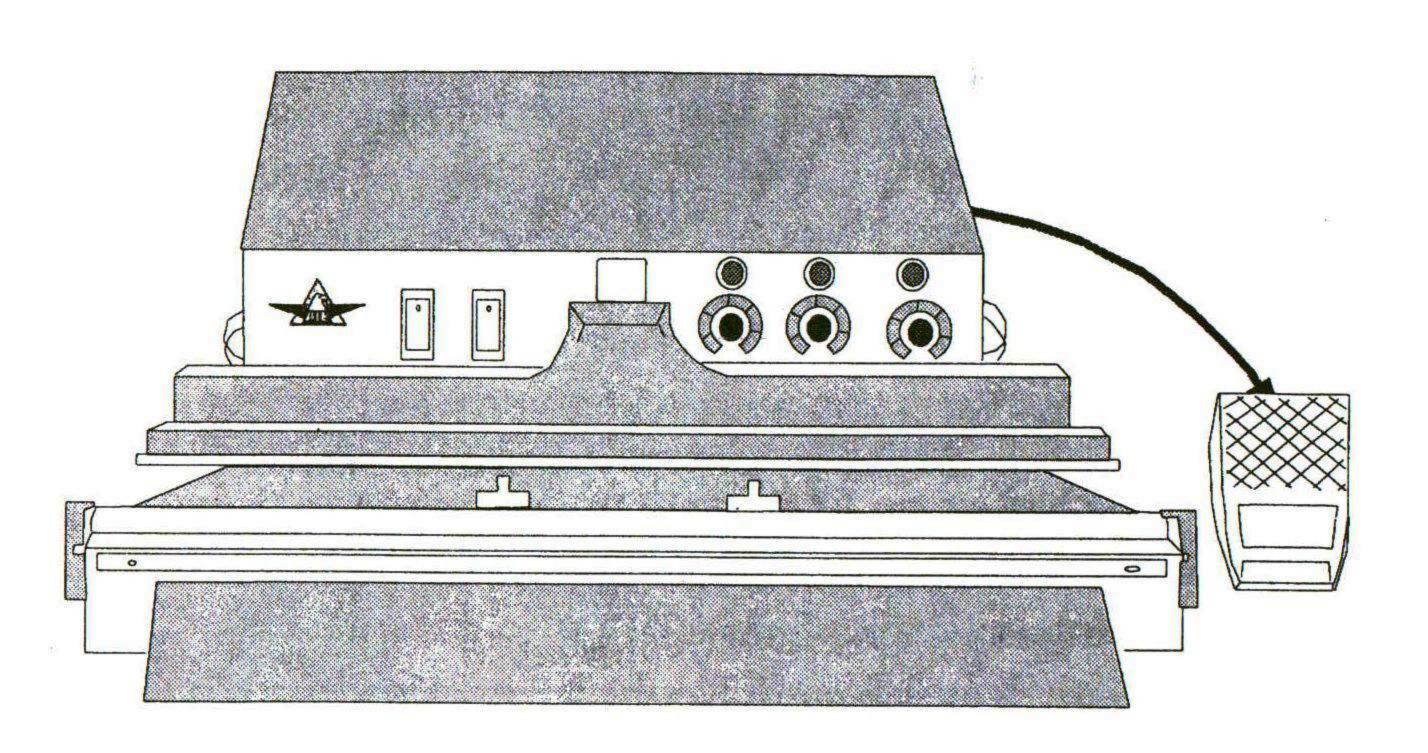

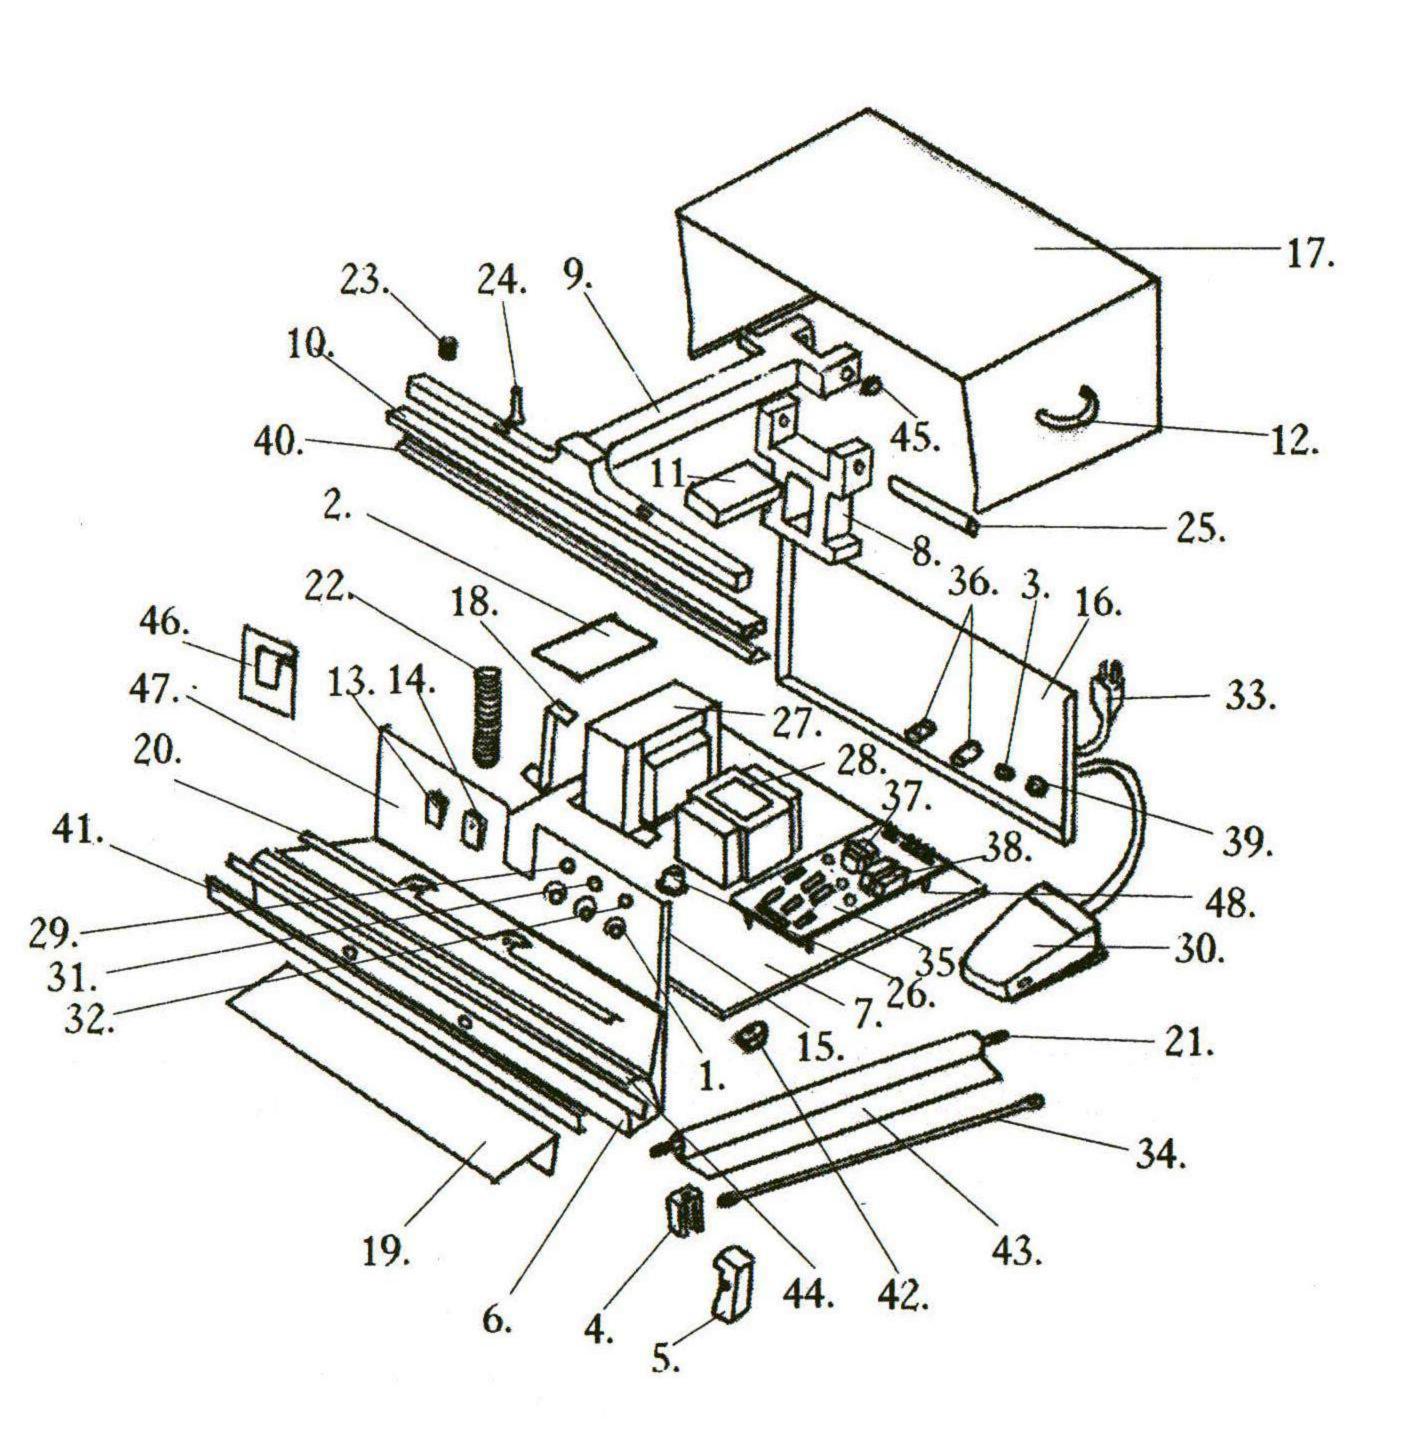


5 PARTS LIST


- 1. TIMER KNOB
- 2. PLASTIC PLATE
- 3. BUSHING
- 4. Heating Element Attachment
- 5. END CAP
- 6. LOWER JAW
- 7. BASE PLATE
- 8. HINGE BRACKET
- 9. UPPER JAW
- 10. UPPER JAW SUPPORT
- 11. FLAT PLATE
- 12. HANDLE STRAP
- 13. ON/OFF SWITCH
- 14. Auto-Manu. Action Selector
- 15. FRONT PLATE
- 16. BACK PLATE
- 17. TOP COVER PLATE
- 18. SPRING LEVER
- 19. OPERATING BOARD
- 20. CLIP FOR CLOTH
- 21. SCREW FOR CLOTH
- 22. RETURN SPRING
- 23. SPRING FOR UPPER JAW
- 24. SCREW FOR UPPER JAW

- 25. HINGE PIN
- 26. SPRING BRACKET
- 27. TRAMS FORMER
- 28. SOLENOID
- 29. RE-CYCLE TIME
- 30. FOOT SWITCH
- 31. CONGEALING TIME
- 32. SEALING TIME
- 33. POWER SUPPER CORD
- 34. HEATING ELEMENT
- 35. CONTROL-PCB
- 36. FUSE BRACKET
- 37. PCB-TRAMS FORMER
- 38. RELAY
- 39. CONNECTOR FOOT PEDAL
- 40. SILICON RUBBER
- 41. FIXED TEFLON PLATE
- 42. RUBBER FOOT
- 43. UPPER TEFLON ROLL
- 44. BOTTOM TEFLON TAPE
- 45. PIN WASHER
- 46. DUST COVER RUBBER
- 47. CONTROL PANEL
- 48. PCB SUPPORT

6 CONNECTION DIAGRAM

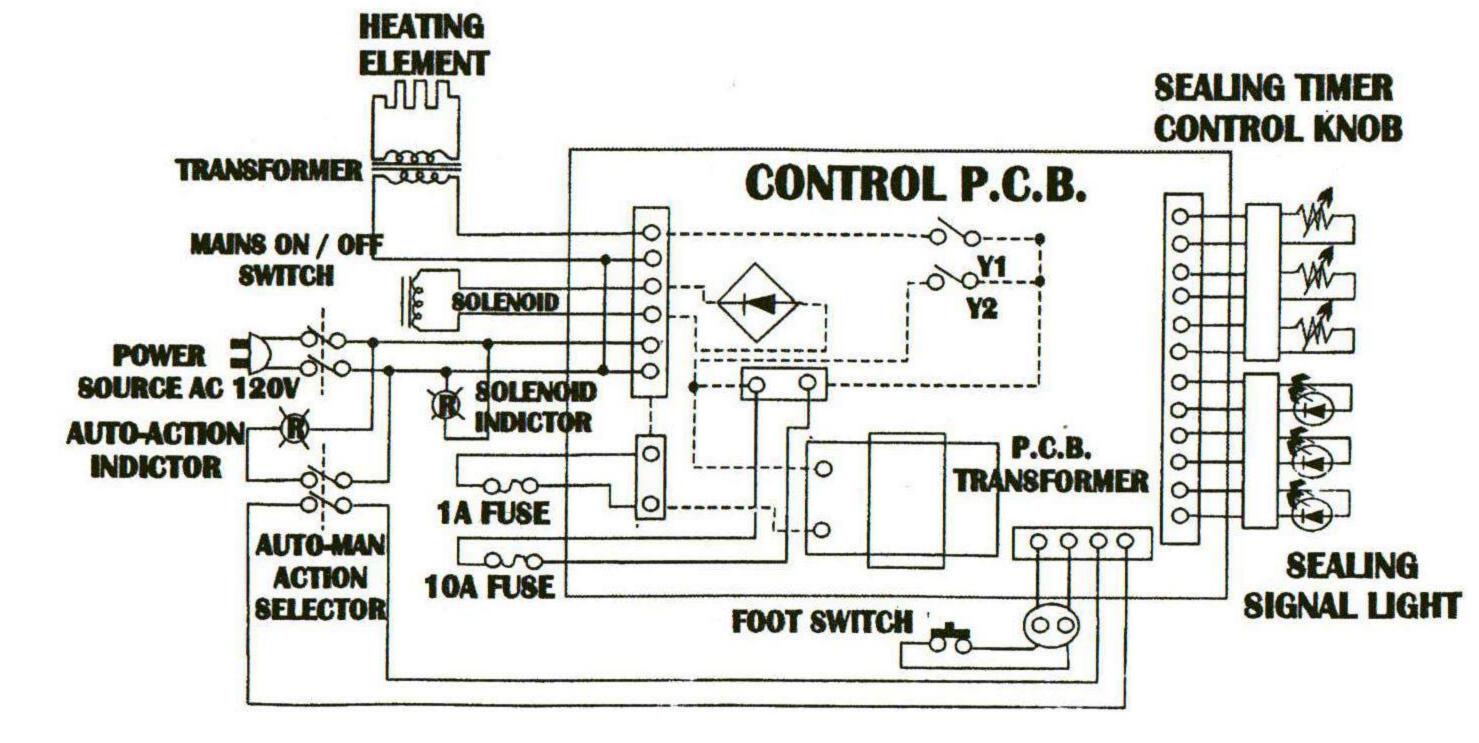

1 INSTRUCTION BOOKLET

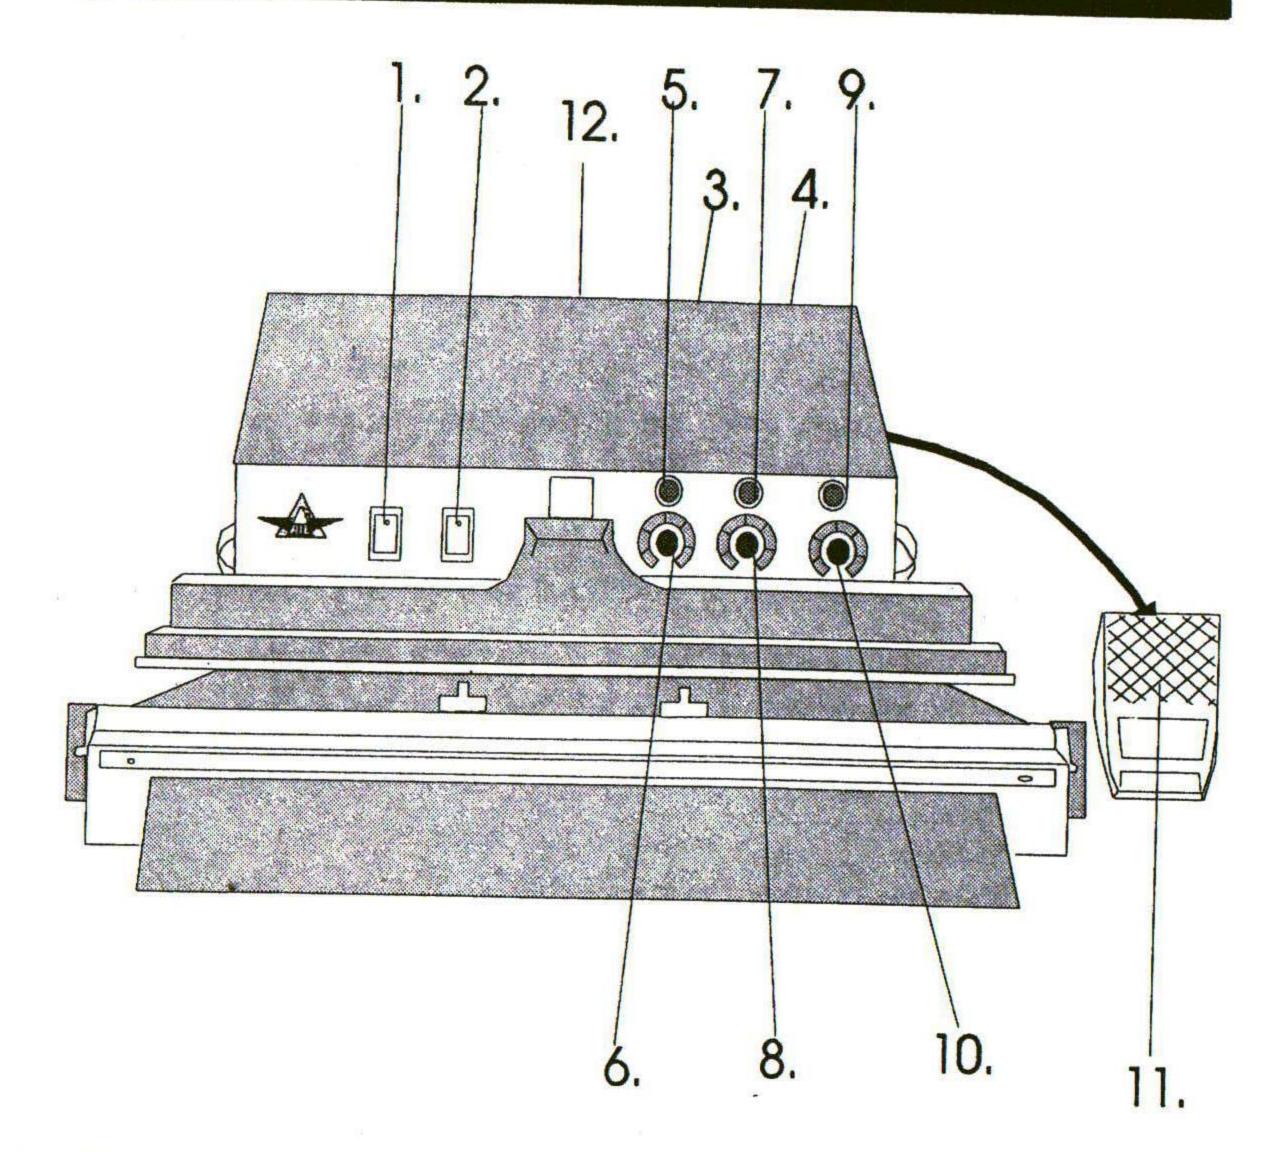

- 1. Power Main Switch
- 2. AUTO-MAN Action Selector
- 3. 10 A Fuse Box
- 4. 1 A Fuse Box
- 5. Re-Cycle Indicating Lamp (RED)
- 6. Re-Cycle Timer Control Knob
- 7. Congealing Indicating Lamp (RED)
- 8. Congealing Timer Control Knob
- 9. Sealing Indicating Lamp (RED)
- 10. Sealing Timer Control Knob
- 11. Foot Pedal Switch
- 12. Fuse

2 OPERATING INSTRUCTION

(1) Set power main switch to ON position.

- (2) Set selector to MAN position for manual operation by pressing the foot pedal switch, or set selector to AUTO position for automatic operation.
- (3) Adjust the re-cycle time knob, appropriate to the frequency of continuous work.
- (4) Adjust the sealing time (heating time) knob, appropriate to the thickness of plastic bag.
- (5) Adjust the congealing time (pressing time) knob, appropriate to the thickness of seal (to be cooled).

NOTE: Sealing and congealing time are according to the material and thickness of the plastic bags. Re-cycle time is according to the working speed of the operator.

3 SPEECIFICATIONS:

| MODEL | AIE-300A1 | AIE-450A1 | AIE-600A1 |
|---------------------|---------------|---------------|---------------|
| Source | 110V | 110V | 110V |
| Impulse Power | 400W | 600W | 800W |
| Max. Seal Length | 350mm | 450mm | 600mm |
| Max. Seal Thickness | 0.6mm | 0.6mm | 0.6mm |
| Heat Time | 0.2~3.0sec. | 0.2~3.0sec: | 0.2~3.0sec. |
| Congealed Time | 1.0~8.0sec. | 1.0~8.0sec. | 1.0~8.0sec. |
| Reset Time | 1.0~8.0sec. | 1.0~8.0sec. | 1.0~8.0sec. |
| Weight | 46 LBS | 51 LBS | 60 LBS |
| Dimensions | 20*17*10 inch | 24*17*10 inch | 29*17*10 inch |

7

ADDITIONAL INFORMATION

- Always keep the sealing platform clean. Particular care should be taken to remove any residue from the teflon tape.
- Do not clean the sealing platform with anything wet.
- If the bottom teflon tape, (under the heating element) should become worn, the heating element may short out and damage the element.
- When replacing the heating element always check the condition of the bottom teflon tape. It is important that you replace the element wire only with the one made for this machine. You can damage the transformer with the wrong element wire.
- Occasionally check the condition of the top pressure pad (silicon rubber) for deformation or severe burn. A poor rubber will effect the quality of your seal.

USE ONLY GENUINE REPLACEMENT PARTS

8 SPARE PARTS

| ACCESSORIES | Q'TY | |
|-----------------|------|--|
| HEATING ELEMENT | 2 | |

CHANGING PARTS

To replace burnt out teflon tape or broken element wires please follow these instructions:


REMOVE PLUG FROM ELECTRIC OUTLET.

1. To replace teflon


- (a) Remove fixed teflon rubber. Loosen teflon clips.
- (b) Pull out teflon tape just enough to cut off burned area. Smooth out teflon and refix the black rubber.
- (c) Rotate teflon screw to pull teflon tight. Retighten the teflon clips.

2. Replacing heating element wire

- (a) Loosen teflon clips. Remove fixed teflon rubber.
- (b) Lift up teflon and remove broken element wire from heater poles (bow springs).
- (c) Put new element wire on heater poles. Do not bend or crimp the wire.
- (d) Replace teflon and teflon rubber. Tighten teflon with teflon screw. Tighten teflon clips.

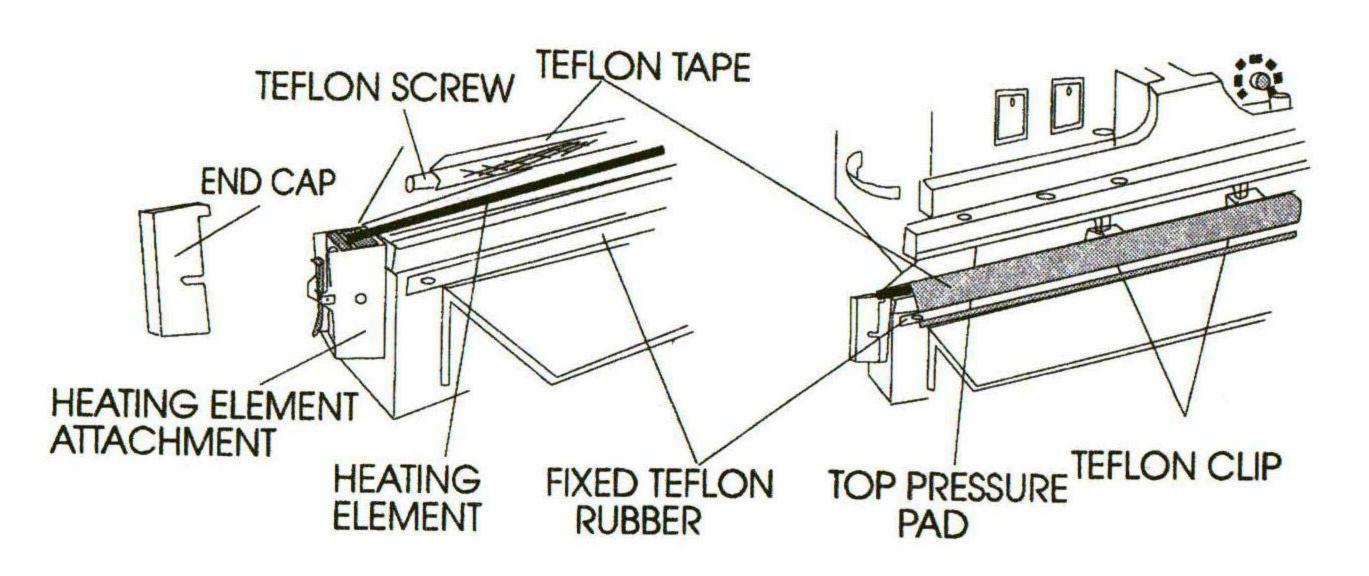

CONSTRUCTION DIAGRAM

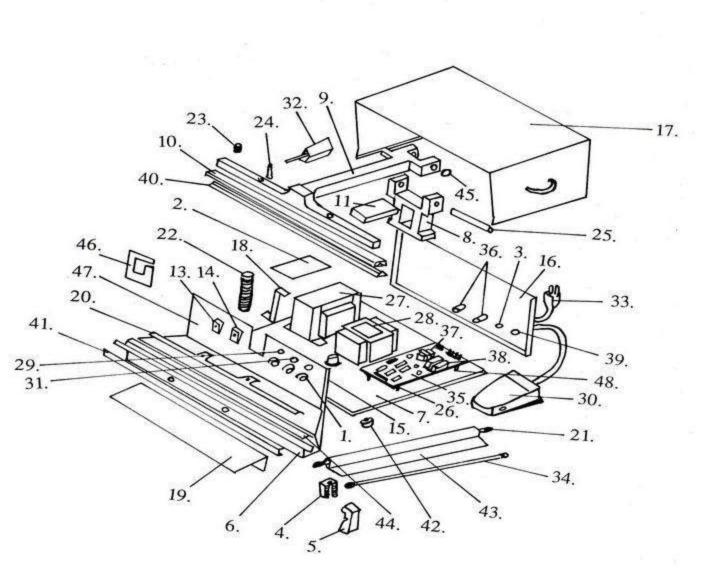

| AIE-450A1 | | | Click to Link Diagrm | | | |
|-----------|----------------------------|-----------|----------------------|----------------------|------------|--|
| No. | Description | Part# | No. | Description | Part# | |
| 1 | Timer Knob | *KNOB | 35 | Control-PCB | *PCB-N2 | |
| 2 | Plastic Plate | *PLATE#2 | 36 | Fuse Bracket | *FUSE-BOXA | |
| 3 | Bushing | *CORDHO-A | 37 | PCB-Transformer | | |
| 4 | Heating Element Attachment | *CAPSETA1 | 38 | Relay | | |
| 5 | End Cap | *ENDCAPA1 | 39 | Connector Foot Pedal | *CONNECTM | |
| 6 | Lower Jaw | *JAW45-LA | 40 | Silicon Rubber | *SR450A1 | |
| 7 | Base Plate | *BASE-PLA | 41 | Fixed Teflon Plate | *FIXTP45A | |
| 8 | Hinge Bracket | *HINGE-A1 | 42 | Rubber Foot | *FOOT-A | |
| 9 | Upper Jaw | *JAW450A1 | 43 | Upper Teflon Roll | *TFS450 | |
| 10 | Upper Jaw Support | *UJS450A1 | 44 | Bottom Teflon Tape | *TFL450A1 | |
| 11 | Flat Plate | *FLAT | 45 | PIN Washer | *LOCK-A | |
| 12 | Handle Strap | *HANDLE-A | 46 | Dust Cover Rubber | *DUST-COV | |
| 13 | ON/OFF Switch | *SW#13 | 47 | Control Panel | *PANEL-A | |
| 14 | Auto-Manu. Action Selector | *SW#14 | 48 | PCB Support | | |
| 15 | Front Plate | *FRONT-CT | | 349 (IdA-1) | | |
| 16 | Back Plate | *BACK-PLA | | 7 | | |
| 17 | Top Cover Plate | *COVER-A1 | | | | |
| 18 | Spring Lever | *LEVER-A1 | | | | |
| 19 | Operating Board | *TA300A1 | | | ë | |
| 20 | Clip For Teflon Roll | *CLIP450 | | | | |
| 21 | Screw For Cloth | *BAR450 | | | Ĵ | |
| 22 | Return Spring | *RE-SP450 | | | | |
| 23 | Spring For Upper Jaw | *JAWSP-A2 | | | | |
| 24 | Screw For Upper Jaw | *PIN450 | | | | |
| 25 | Hinge Pin | *HINGEPIN | | | | |
| 26 | Spring Bracket | *SP-BRACK | | | | |
| 27 | Transformer | *TR450A1 | | | | |
| 28 | Solenoid | *SD450A1 | | | | |
| 29 | Re-Cycle Timer | *VR1M-SET | į. | | | |
| 30 | Foot Switch | *FOOTSW | | | | |
| 31 | Congealing Time | *VRIM-SET | | | | |
| 32 | Sealing Time | *VRIM-SET | | 9 | e e | |
| 33 | Power Supply Cord | *CORD-AF | | | | |
| 34 | Heating Element | *EF450A1 | Ŕ | | | |