IMPULSE SEALER Instruction Manual





Œ

100HI, 200HI, 300HI 400HI, 500HI, 205HI 305HI, 405HI

1 DESCRIPTION OF EVERY PART

1 Handle Knob 11 Lower Element Teflon 2 Platen Arm 12 Upper Teflon Cloth 13 Strain Reliefe Bushing Platen Spring 3 Platen 14 Power Supply Cord (5 (4) Silicon Rubber 15 Heating Element 16 Pilot Lamp Swivel 6 17 Timer Knob Hinge Hinge Bracket 18 Control Panel (37) Enclosure **19 Variable Resistor** 10 Metal Plate 20 Switch Level (20) (11) (15) (12) (10) (16 $\overline{\mathbf{7}}$ (19) 8 9 (17) (13) (18) 14

FIG. 1



1

2

3

4


5

6

7

8

9

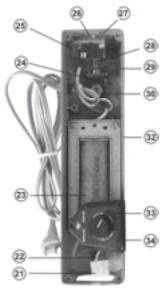




USE ONLY GENUINE REPLACEMENT PARTS

- 21 Wire Connector
- 22 Internal Wiring
- 23 Heater Transformer
- 24 Connecctors
- 25 Microswitch
- 26 Switch Bracket
- 27 Switch Insulation
- 28 Switch Lever Spring

- 29 Switch Lever (Bottom View)
- 30 Heater Terminal Assembly
- 31 Fuseholder
- 32 Cover Plate
- 33 Printed Wiring Board
- 34 Relay
- 35 Rubber Foot & Screw



2 CONNECTION DIAGRAM

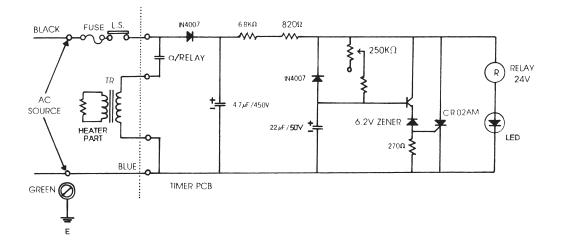



3 PURPOSE

This **IMPULSE SEALER** is to insure a water tight and air tight seal for effective autoclaving and sterlization procedure.

4 CHARACTERISTIC

Compact Design Strong Water Tight Seal Fast Operation Power Saving Precision Electric Circuitry Long Life



5 **OPERATION**

- Plug cord into AC outlet. No switch necessary. Machine will operate only when arm is depressed. Regulate the timer according to thickness of material to be sealed. Use a higher number for thicker material. Pull handle down. Sealing takes place when light is on, leave down for additional second after light goes off for a better seal.
- Use a lower number in case seal burns through.
- Raise to higher number seal isn't tight.
- If the bag sticks to silicon rubber, you did not allow enough cooling time.
- Once you set the heating timer, there is no need to reset. It will remain constsnt and unchanged.
- No need to remove plug from socket as machine will not operate until handle is lowered. No power is consumed.

6 NOTES

- Always keep sealing platform clean. Leaving residue will reduce life of element, teflon, and silicon rubber.
- Never use moisture to clean sealing surface.
- Replace torn teflon at once. A torn cloth will short circuit the element and damage it. Every time you replace the element, replace the lower and upper teflon cloth.
- For best operation, use only genuine replacement parts.
- A worn silicon rubber will influence the seal, change the silicon when worn or burned.
- Disconnect plug from electrical outlet before servicing the machine.
- Close supervision is required when the product is used near children.



7 SPARE PARTS

ACCESSORIES	Quantity
Heating Element	2
Upper Teflon Cloth	2
Fuse (400HI, V405HI, 500HI)	1

8 SPECIFICATIONS

Model	100HI	200HI/205HI	300HI/305HI	400HI/405HI	500HI
Max Seal Length	110mm	200mm	300mm	400mm	500mm
Max. Seal Thiness	2x0.15mm	2x0.15mm	2x0.15mm	2x0.15mm	2x0.15mm
Seal Width	2mm	2mm/5mm	2mm/5mm	2mm/5mm	2mm
Watts	200W	350W/600W	500W/850W	750W/1000W	800W
Weight (Kg)	2.7Kg	3.4Kg/4.2Kg	4.2Kg/5.2Kg	5Kg/5.8Kg	6.2Kg
Weight (Lbs)	2.2Lbs	7.5Lbs/9.25Lbs	4.2Lbs/11.5Lbs	11Lbs/11.75Lbs	13.75Lbs

