


Nelson Wrap Dispenser (NWD) 2012 Directions Abastecedor de Empaque Nelson (NWD) 2012 Direcciones

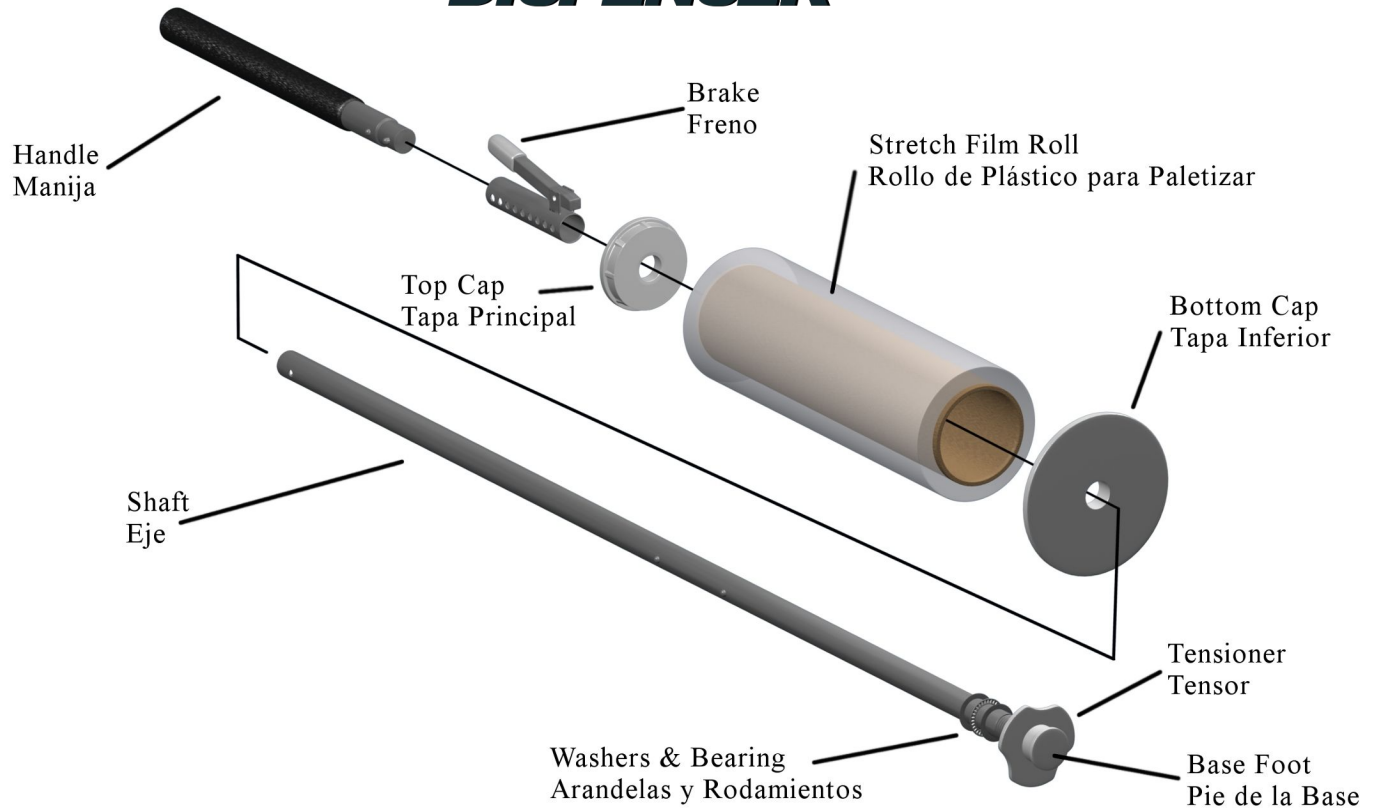

Unpacking and Assembly

Step 1: Remove the following parts from the box: Bottom Cap (enclosed in bag), Handle, and Shaft.

Step 2: Remove the following parts from the Shaft in this order: Brake and Top Cap.

Step 3: Slide the Bottom Cap onto the Shaft first, then the roll of stretch film along with the Top Cap. Slide the Brake down the Shaft to the hole corresponding to the film size you are using. Adjust the Tensioner to the desired tension, then attach the Handle. You are now all set to begin wrapping!

Changing the Stretch Wrap Roll

Loosen the Tensioner. Remove the following parts from the Shaft in this order: Handle, Brake, and Top Cap. Remove the empty stretch wrap core from the Shaft and replace it with a new stretch film roll. Reassemble the dispenser.

Warning: Do **Not** remove the Tensioner, Base Foot, Bearing or Washers from the dispenser. Doing so could result in poor operation and dispenser malfunction.

Desempaque y Ensambladura

Paso 1: Remueva las siguientes partes de la caja: Tapa inferior (incluido en la bolsa), Manija, y Eje.

Paso 2: Remueva las siguientes partes del Eje en este orden: Freno y Tapa Superior.

Paso 3: Deslice la Tapa Inferior sobre el Eje primero, luego el rollo de plástico para paletizar junto con la Tapa Superior. Deslice el Freno por el Eje al orificio correspondiente al tamaño del plástico que está utilizando. Ajuste el tensor a la tensión deseada, luego, coloque la Manija. Ahora está todo listo para comenzar a envolver!

Cambiando el Rollo de Plástico para Paletizar

Afloje el tensor. Remueva las siguientes partes del Eje en este orden: Manija, Freno, y Tapa Superior. Remueva el rollo vacío del eje y replácelo con un rollo de plástico para paletizar nuevo. Reensamble el dispensador.

Advertencia: No quite el Tensor, Pie de la Base, Rodamiento o Arandelas del dispensador. Hacerlo, podría resultar en mal manejo y mal funcionamiento del dispensador.

Using the Nelson Wrap Dispenser Usando el Abastecedor de Empaque Nelson



Fig. 1
Figura 1



Fig. 2
Figura 2



Fig. 3
Figura 3

Wrapping Skids

First, set the tension on the bottom of the dispenser. Then holding the dispenser as seen in **Fig. 1** with your right near the brake (if right handed), start at the base of the skid and walk *forward* in an upright, natural position, riding the Base Foot on the floor. Once you can comfortably reach the hand brake, you may apply it as you go around each corner for a tighter wrap. For best results, do not “ride” the handbrake.

Continue wrapping and gradually bring up the dispenser until you are able to comfortably switch your left hand to the bottom of dispenser as seen in **Fig. 2**.

For high skids, you may switch the dispenser into the upright position with your right hand near the handbrake as seen in **Fig. 3**. Tilt the dispenser slightly forward so that the film being applied is holding the bulk of the weight, not your arms.



Fig. 4
Figura 4

Capping Skids

To cap off a skid, hold the dispenser as seen in **Fig. 4** and go from corner to corner creating a figure X pattern on top of the skid. This will help protect the load from debris and loss of freight.

Wrapping a Skid on a Forklift

Stand in front of the skid and wrap the load in a safe manner by circling the dispenser over and under the skid as seen in **Fig. 5**. Figure X the top when finished to secure the whole load.

Envolviendo Paletes

En primer lugar, ajustar la tensión en la parte inferior del dispensador. Luego sosteniendo el dispensador como se ve en la **Figura 1** con su derecha cerca del freno (si la derecha lo sostiene), comenzar a partir de la base del paleta y caminar hacia adelante en una posición vertical, y natural, pasando por el Pie de la Base sobre el piso. Una vez que pueda confortablemente alcanzar el freno de mano, puede aplicarlo a medida que avanza alrededor de cada esquina para una envoltura más apretada. Para obtener mejores resultados, no "montar" el freno de mano.

Continúe envolviendo y poco a poco traer el dispensador hasta que pueda cambiar cómodamente a la mano izquierda hasta el fondo del dispensador como se ve en la **Figura 2**.

Para paletes altos, puede cambiar el dispensador en posición vertical con la mano derecha cerca del freno de mano como se ve en la **Figura 3**. Incline el dispensador ligeramente hacia adelante para que el plástico que esta siendo aplicado esta sosteniendo la mayor parte del peso, no sus brazos.



Fig. 5
Figura 5

Tapando Paletes

Para tapar un paleta, sostenga el dispensador como se ve en la **Figura 4** e ir de esquina a esquina creando un patrón en figura X en la parte superior del paleta. Esto ayudará a proteger la carga de residuos y pérdida de carga.

Envolviendo un Paleta en una Montacargas

Párese en frente de la paleta y envolver la carga de manera segura en círculo el dispensador por encima y por debajo del paleta como se ve en la **Figura 5**. Figura X de la parte superior cuando haya terminado para asegurar la carga completa.