

Adapter for wire wicketed ice bags

Step 1:


Run metal wire wicket through front of adapter.

Step 2:


Insert wicket wires through bottom holes of the adapter.

Step 3:


Hang adapter on "J" mount positioning the back of adapter to the back of ice bagger.

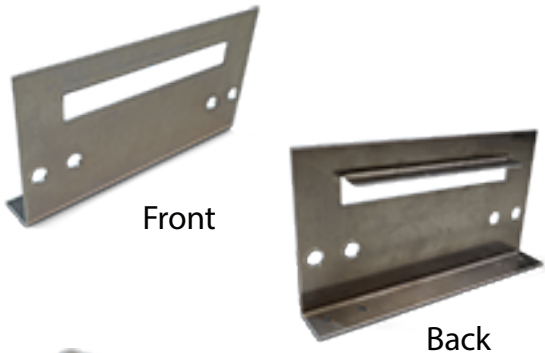

Adapter placement shown without bags

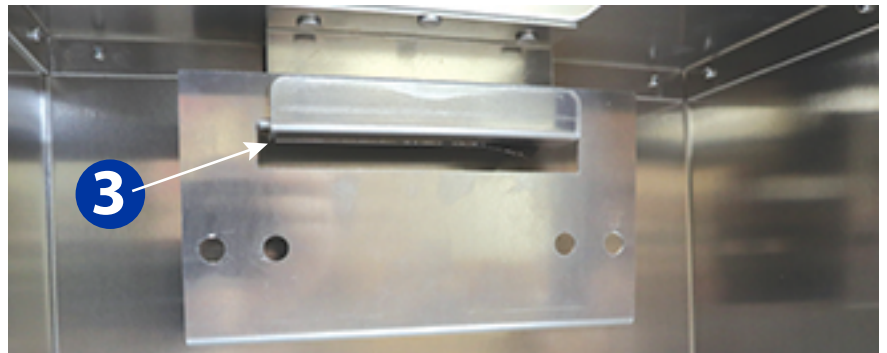

Adapter placement shown with bags

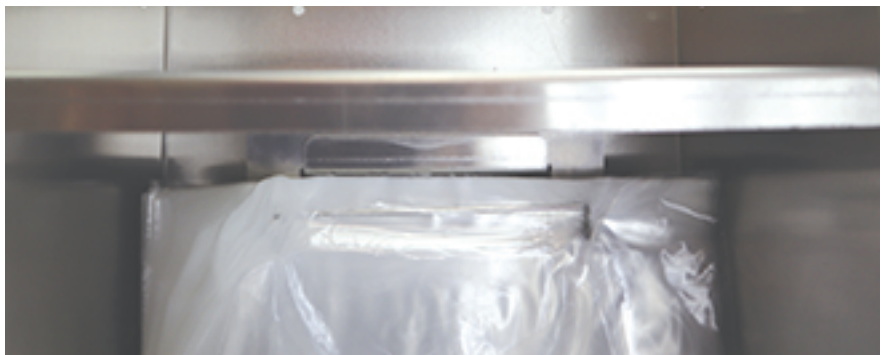

Ice Bagger for plastic wicketed ice bags

Step 1:

Attach the hanger on the sides or back of ice bagger using the pre-drilled holes.

Step 2:

Hang the unit on the front of the ice machine.

Step 3:

Hang the plastic wicketed ice bags (sold separately) on the bracket below the opening.

Step 4:

Place the ice chute on top of the ice bagger unit. Open the first ice bag around the bottom of the ice chute.

Step 5:

Peel off protective film from dispenser.

Step 6:

You are ready to bag your ice with a BPA-Free ice scoop (sold separately).

